




Chromo Noria Camera Replacement

This guide will help you remove both the front facing and back facing cameras.

Written By: Ryan Rho

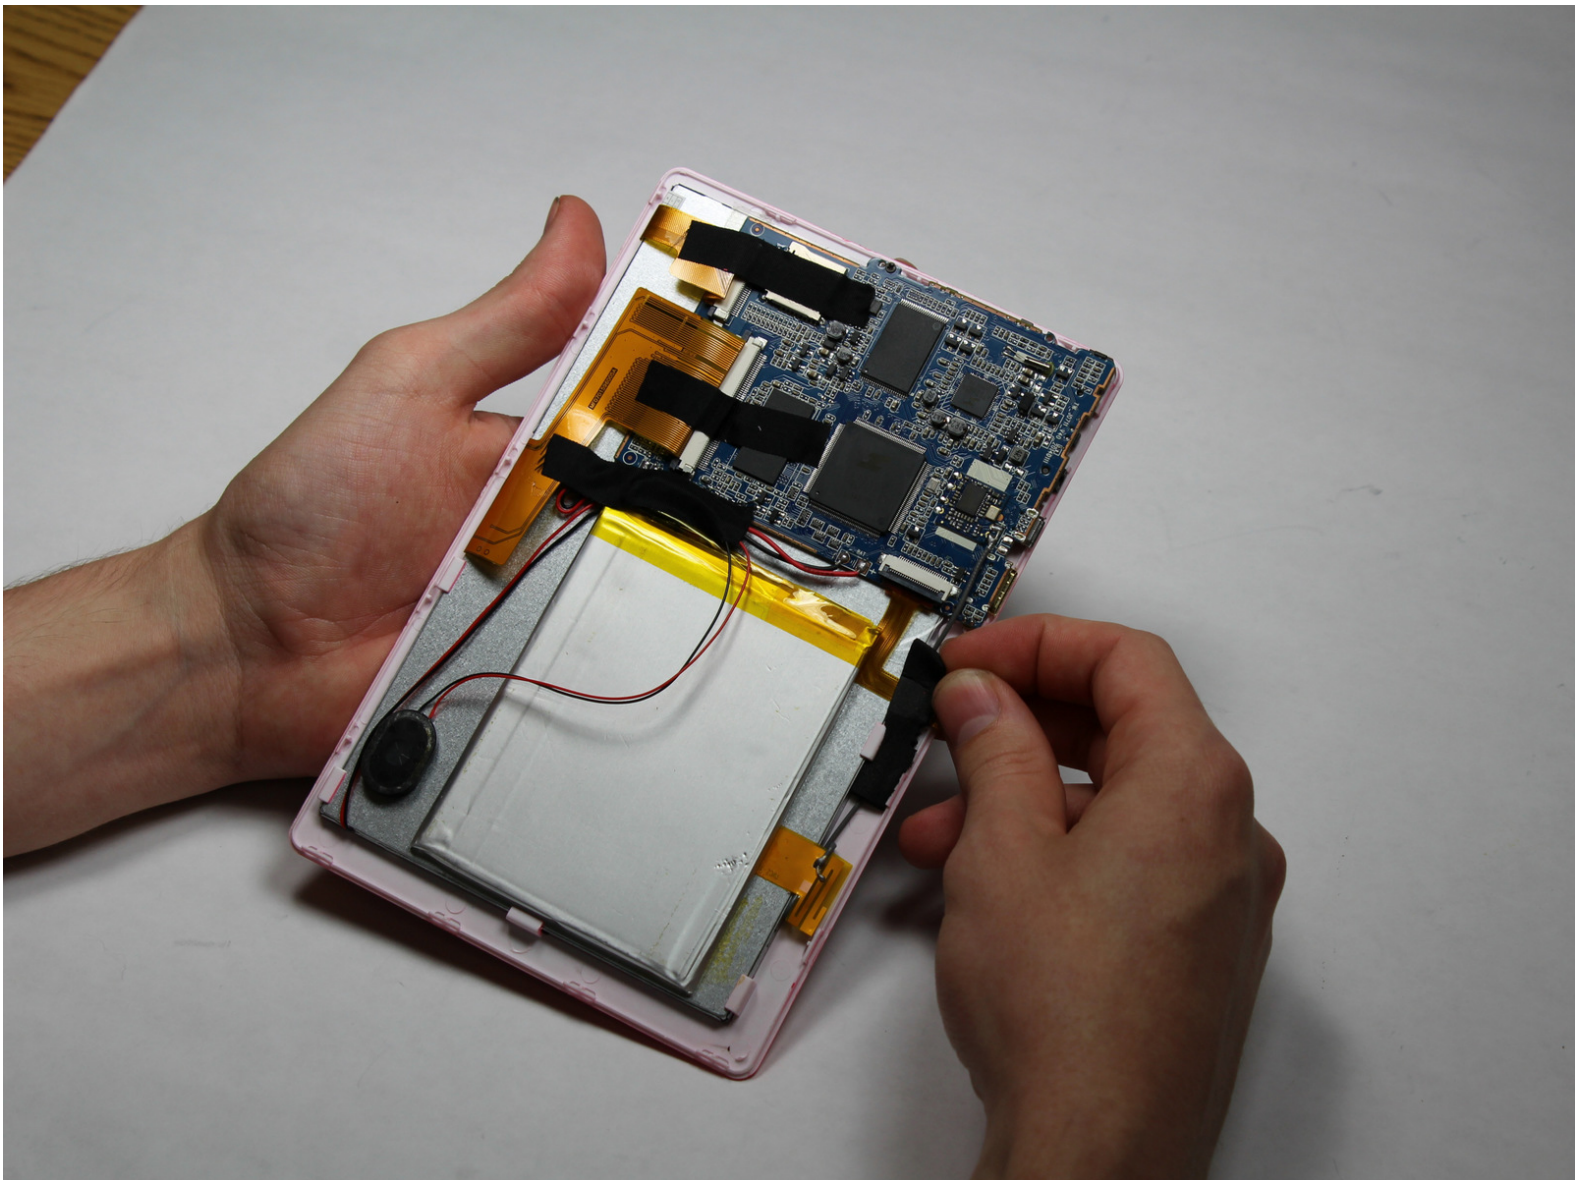

INTRODUCTION

This guide will walk you through the necessary steps to replace either camera on the Chromo Noria. Make sure you've got all the necessary tools and a bit of time before beginning!



TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Back Panel





- Insert your Plastic Opening Tool into the crease between the front panel and back panel.
- Slide the Opening Tool around the entire device. As you progress, you should see the device open.

Step 2

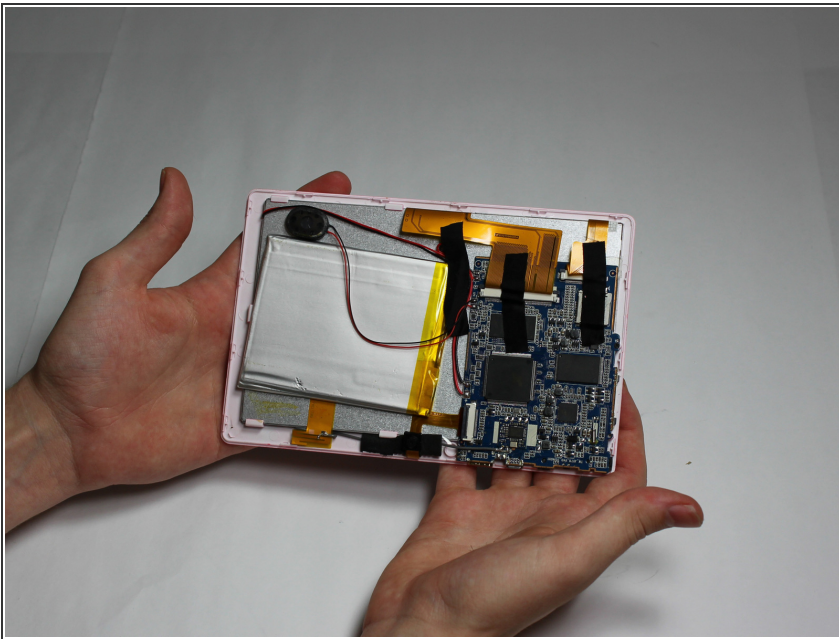



- Carefully turn the device over.
- Lay the back panel aside so you can see the device's parts.

Step 3 — Camera

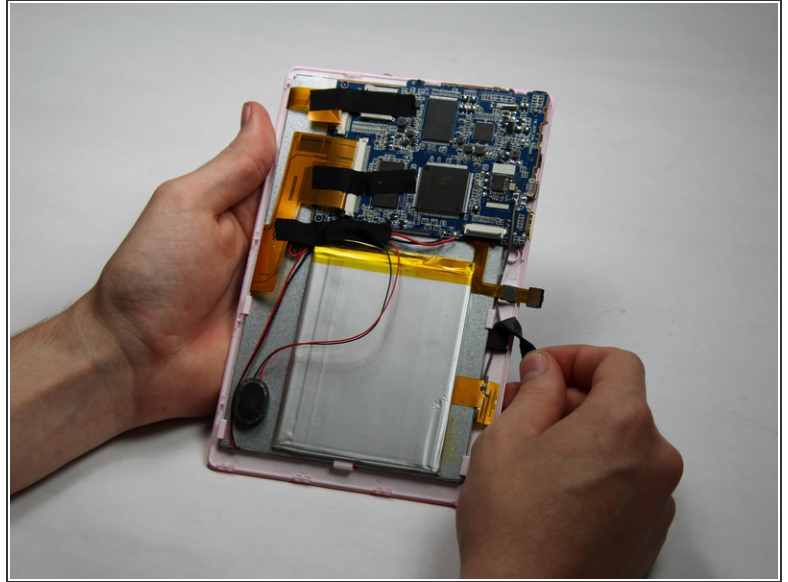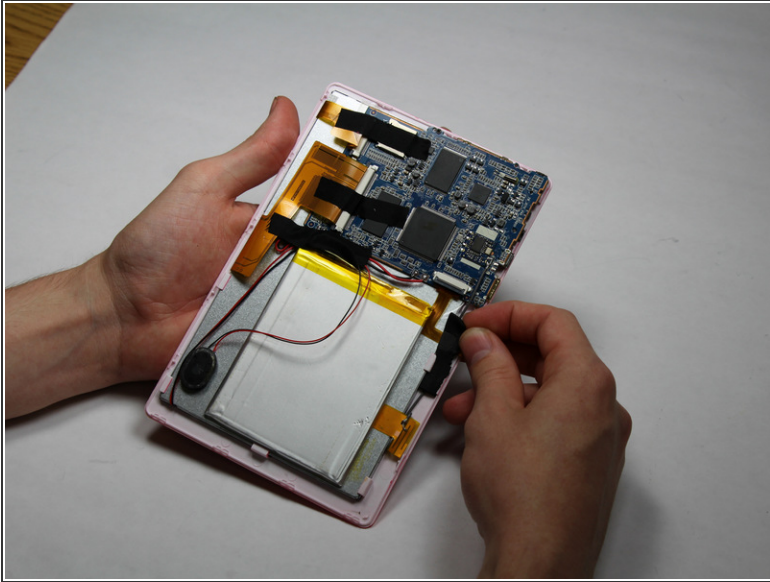



- Carefully detach one side of the black tape from the board.

Step 4

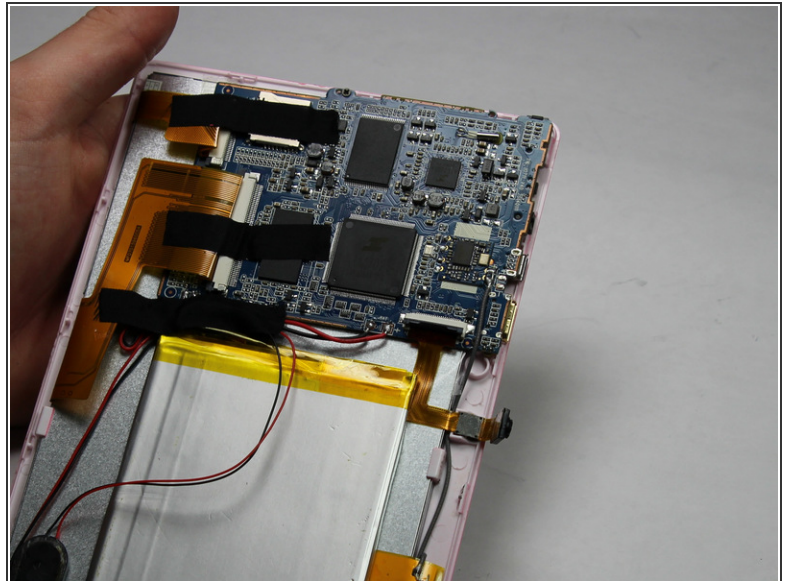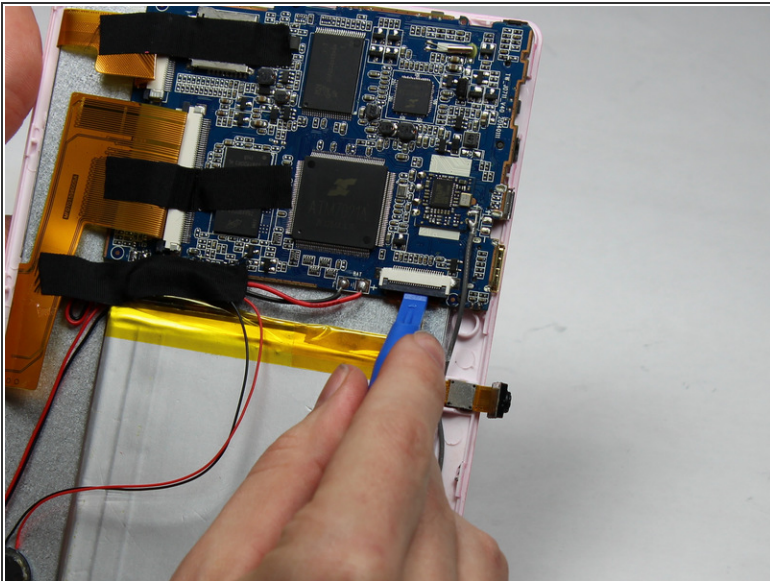

- Using a small plastic opening tool, flip the black connector up until it makes "tick" sound.
- Now, the flexing cable is ready to be removed.

Step 5

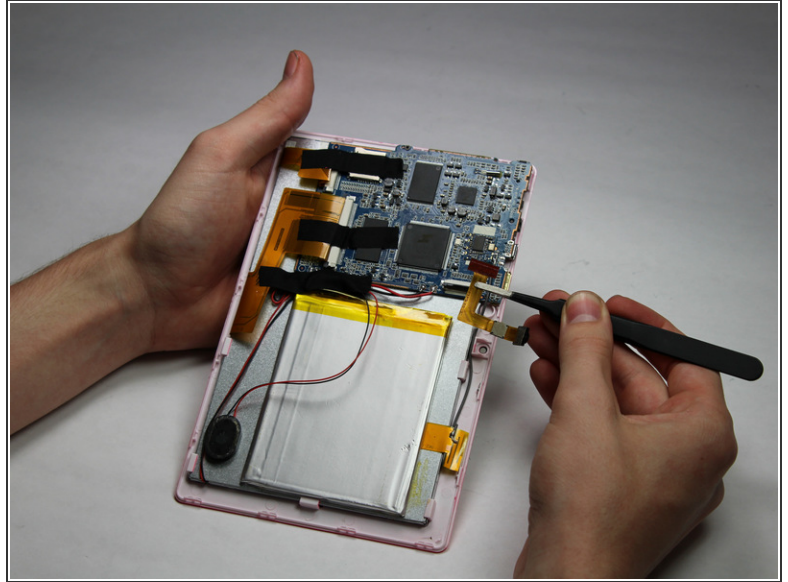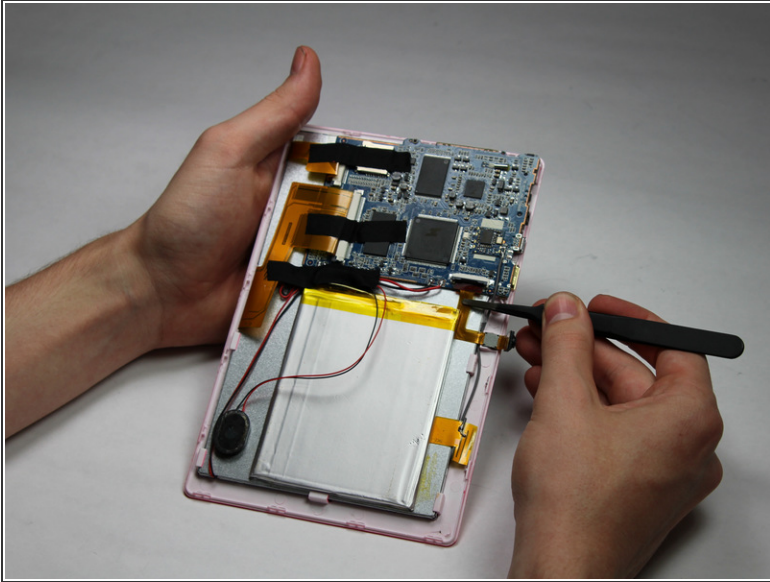

- Using a pair of tweezers, hold the flexing cable right below the black connector.
- Gently pull the flexing cable out of the connector while balancing the other side of the device with another hand.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 11:06:49 PM.